

**Model DV-2000 MTS/LR & DV-2000 MTS/LR PRO  
DIGITAL AUTOLOAD STORECASTER & MUSIC THRU SYSTEM**

**1 MESSAGE SELECTION**

Enable and disable messages to be played or recorded.

**EJECT / RECORD STOP PUSH-BUTTON:**

**2** This ejects the tape when the system is playing a message. If pressed during the recording process the recording will be stopped.

**APPEND / REPLACE PUSH-BUTTON:**

**3** Toggles the Append / Replace mode as displayed on the associated LED.

**NO TAPE LED:**

**4** Yellow light ON indicates there is no cassette inserted. Yellow light OFF indicates the cassette is in place.

**RECORD LED:**

**5** Used to determine tape loading mode. Red light ON, indicates message (s) is being loaded into memory.

**PLAYING LED:**

**6** This green LED is ON when the system is playing a Pre-Recorded message.

**SPEAKER PUSH-BUTTON:**

**7** Turns local Monitor ON/OFF.

**POWER:**

**8** Insert supplied power adapter.


**BGM LEVEL:**

**9** Adjusts level of external music source.

**BGM INPUT:**

**10** Connect to external source of music.

**The Mackenzie Dynavox  
DV-2000 MTS/LR & MTS/LR PRO Quikey  
V 1.0 Feb. 24, 2004  
Mackenzie Laboratories, Inc.  
1163 Nicole CT, Glendora, CA 91740 USA  
TEL (909) 394-9007 FAX (909)394-9411  
www.macklabs.com**

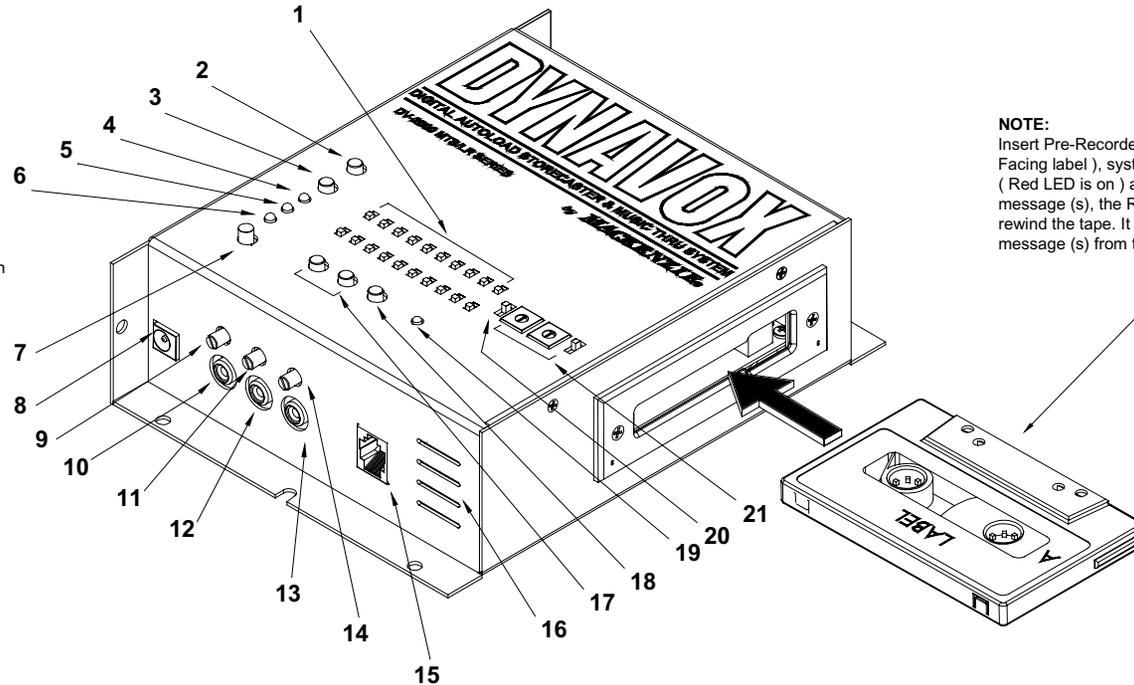

**NOTE:**

Insert Pre-Recorded tape Cassette as shown ( Tape up, Facing label ), system will rewind tape then start loading ( Red LED is on ) at the end of downloading the message (s), the Red LED will turn off, system will rewind the tape. It will automatically start playing the message (s) from the digital audio memory Enabled.

**11 APHEX MIX:**

Adjusts the amount of high frequency enhancement necessary to deliver the best overall system performance.

**12 AUDIO OUTPUT (LINE):**

Audio output level of up to +4dB into 600 Ω, this is a standard level for most applications.

**13 AUDIO OUTPUT (POWER):**

Audio output level of up to 1W into 8 ohm. Use this output if more drive is needed to reach a more comfortable listening level.

**14 LEVEL:**

Adjusts the volume to the line level or power audio outputs.

**15 LOCAL RECORD INPUT:**

Use with LR-HSET ( optional ) hand set for local recording.

**16 MONITOR SPEAKER:**

Allows user to preview message recording and play back.

**17 BGM FADE UP / DOWN PUSH-BUTTON:**

Adjusts the Amount the BGM input is ducked when a message is played.

**18 LOCAL RECORD PUSH BUTTON:**

Press this button to initiate local record function

**19 REPLACE / APPEND MODE LED:**

Indicates if system is in Standard mode (OFF) or Replace & Append mode (ON).

**20 PLAY MODE SWITCH:**

UP = music only.  
MID. = music & message.  
DOWN = message only.

**21 MUSIC INTERVAL**

MINUTE/SECOND SWITCH: Select between minute or second mode.  
TENS AND ONES ROTARY: To set musical interval between message playing. Set the rotary switches to the desired time between 00 and 99.